


FUEL PRESSURE TEST

Service Repair No. 19.50.13

1. Ensure ignition is switched off.
2. Disconnect battery earth lead.
3. Position absorbant cloth around fuel feed hose to pipe connection.

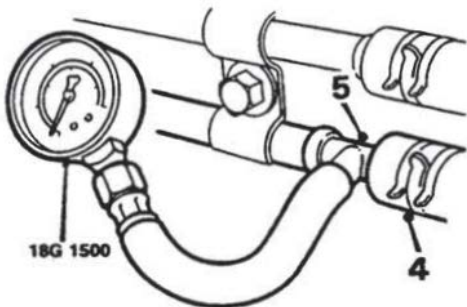

19M0178

4. Release clip and disconnect fuel feed hose from pipe.
5. Connect pressure gauge 18G 1500 between fuel feed hose and pipe.
6. Connect battery earth lead.
7. Start engine. Pressure should reach 1.0 bar.
8. Stop engine. Pressure drop should not exceed 0.7 bar in first minute.
9. If figures given in 3 and 4 not achieved, check for leaks. If no leaks found, renew regulator valve assembly.