

## Line fuses (four-fuse fuseblock – later models)

| Rating (amp) |       |
|--------------|-------|
| 15           | ..... |
| 10           | ..... |
| 15           | ..... |
| 10           | ..... |
| 10           | ..... |

## Fuses (twenty four-fuse fuseblock)

| Fuse connecting | Rating (amp) |
|-----------------|--------------|
| 1               | 15           |
| 2               | 15           |
| 3               | 15           |
| 4               | 15           |
| 5               | 15           |
| 6               | 15           |
| 7               | 20           |
| 8               | 10           |
| 9               | 10           |
| 10              | 10           |
| 11              | 10           |
| 12              | 10           |
| 13              | 10           |
| 14              | 10           |
| 15              | 10           |
| 16              | 10           |
| 17              | 10           |
| 18              | 10           |
| 19              | 20           |
| 20              | 15           |
| 21              | 10           |
| 22              | 20           |
| 23              | Not used     |
| 24              | 10           |

### Circuits protected

- Right-hand side and tail lights
- Direction indicators/hazard flashers, interior light
- Dim-dip lighting
- Rear foglight

### Circuits protected

- Heated rear window
- Reversing lights, stop-lights, headlight dim/dip\*, direction indicator relay

### Auxiliary cooling fan

### Headlight dim/dip\*

### Heater blower motor, sunroof motor\*

### Wipers/washers

### Headlight flasher, horn, anti-theft alarm\*

### Tachometer\*, engine management ECU\*, fuel pump relay\*, anti-theft alarm\*

### Radio/cassette, cooling fan relay, automatic gear selector light\*

### Radio memory\*, interior light, direction indicators, hazard flasher, anti-theft alarm LED\*, brake test circuit\*

### Fuel pump\*

### Starter signal

### Left-hand, side and tail lights

### Right-hand, side and tail lights, instrument illumination

### Left-hand headlight main beam

### Right-hand headlight main beam, main beam warning light

### Left-hand headlight dip beam

### Right-hand headlight dip beam

### Not used

### Not used

### Not used

### Not used

### Rear foglight

\* depending on model